

Sears Washer and Dishwasher troubleshooting info.

Washer 2001 Front Loader Model 11042922200 , most of the front loaders that are this age or sooner will troubleshoot the same.

October 14, 2008

Washer has a self-diagnosis system, which tends to fix several items and let you know via codes that you will see when running this diagnostic.

The diagnosis is about 10 minutes, There are 8 codes, and if 1-5 code that will show up on the display. If you get to 5 and it runs just fine, then your ok. You are pretty much home free if you make it to 5, but let it run all the way to 8 ,which might take slightly over 10 minutes. Follow the instructions to the T.

1. Unplug the washer for a full 2 minutes
2. Press the "Drain and Spin" button On the main panel on the left side of the round selector button.
3. End of cycle – select Off
4. Options – press Prewash button 4 times quick followed by the "Start" button for 3 sec and let go.
5. You will see CC 01 ,and let it run
6. When complete Press and hold Stop or Cancel button for 3 seconds 2 times. (if this does not work, unplug the washer for 2 minutes.)

Error Code info that you typically have to pay for on the web site – ServiceMatters.com
(Rapid Resolution)

Error Code –

1. Hot intake valve
2. Cold intake valve
3. Mixer valve
4. Detergent Valve
5. Gears
6. Gears
7. Gears
8. Gears

Another tidbit of information for Almost All dishwashers

1. Unplug for 2 minutes
2. Toggle from high temp to heat dry buttons back and forth 3 cycles
3. The diagnosis should start
4. Note – Fabric softeners need to be diluted to use as the tubes are very small and will get clogged.